




CD/DVD Player


Startup Guide / Guide de démarrage / Guía de inicio rápido / Guia de Início Rápido

1

A

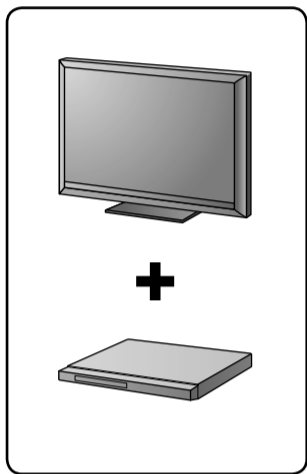


■ COMPONENT VIDEO & AUDIO

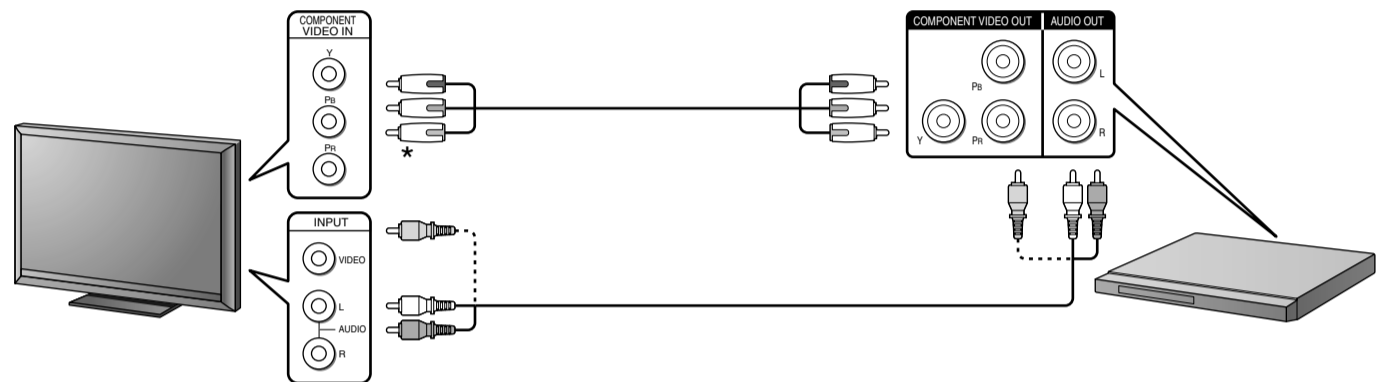


■ VIDEO & AUDIO



B

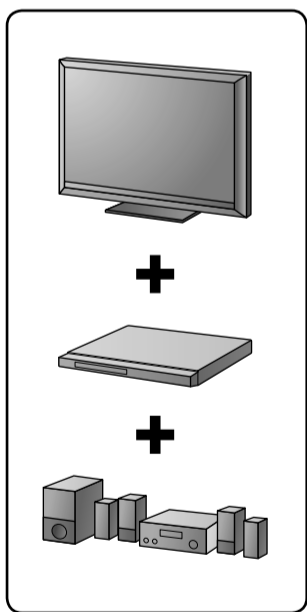


■ COAXIAL

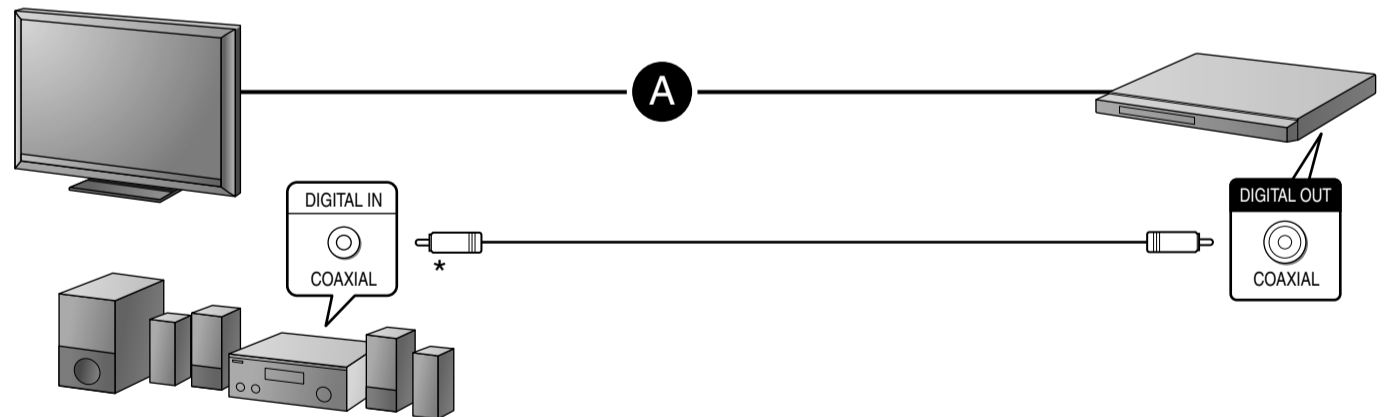


* Not supplied / Non fourni / No suministrado / Não fornecido

2



1

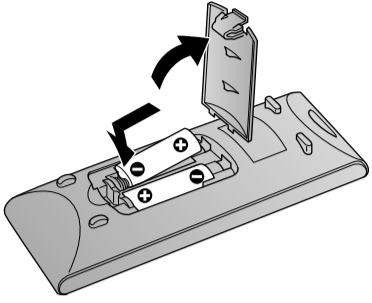

2

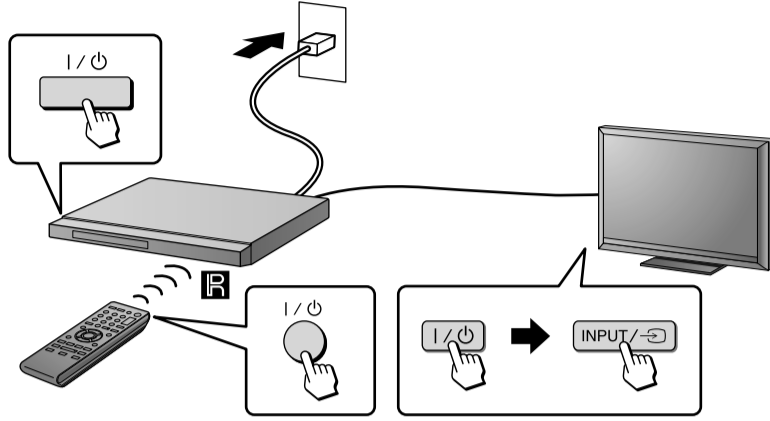


3

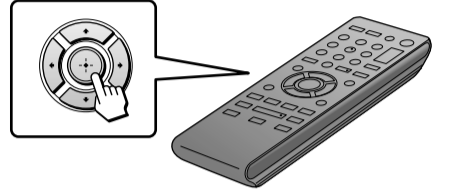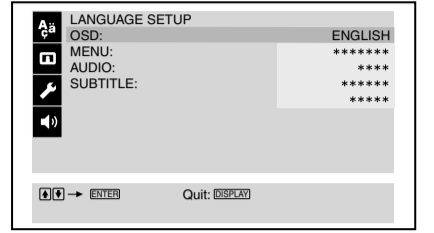


3

1

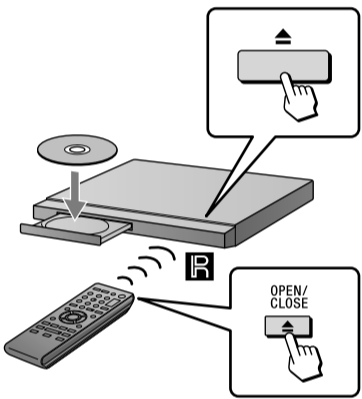

2

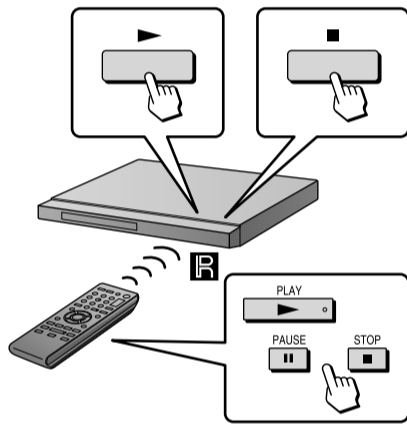

TIME/TEXT

PICTURE NAVI

AUDIO

SUBTITLE

MENU

DISPLAY

Navigation Bar 1

Navigation Bar 2