

# CD/DVD Player

## IMPORTANTE

POR FAVOR LEA DETALLADAMENTE ESTE MANUAL DE INSTRUCCIONES ANTES DE CONECTAR Y OPERAR ESTE EQUIPO.

## Reference Guide

## DVP-SR200P



# WARNING

Name of the product:  
CD/DVD player (compact disc/  
digital video disc player)  
Model: DVP-SR200P

**To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.**

**To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.**

**The AC power cord must be changed only at a qualified service shop.**

**Batteries or batteries installed apparatus shall not be exposed to excessive heat such as sunshine, fire or the like.**

## CAUTION

The use of optical instruments with this product will increase eye hazard. As the laser beam used in this CD/DVD (compact disc/digital video disc) player is harmful to eyes, do not attempt to disassemble the cabinet. Refer servicing to qualified personnel only.

## Precautions

- To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
- The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.
- Do not install this player in a confined space, such as a bookshelf or similar unit.
- Install the player so that the AC power cord can be unplugged from the wall socket immediately in the event of trouble.
- If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates.

## Note about the discs

- Do not use the following discs:
- A disc recorded in a color system other than NTSC (national television system committee), such as PAL (phase alternation line) or SECAM (sequential color and memory) (this player conforms to the NTSC (national television system committee) color system).
  - A disc that has a non-standard shape (e.g., card, heart).
  - A disc with a label or sticker on it.

## Region code

Your player has a region code printed on the back of the unit and only will play commercial DVDs (digital video disc) (playback only) labeled with identical region codes. This system is used to protect copyrights.

Commercial DVDs (digital video disc) labeled  will also play on this player.

Depending on the commercial DVD (digital video disc), there may be no region code indication, even though playing the commercial DVD (digital video disc) is prohibited by area restrictions.



Region code

## Copyrights

- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- “DVD+RW” (digital video disc plus rewritable), “DVD-RW” (digital video disc minus rewritable), “DVD+R” (digital video disc plus recordable), “DVD+R DL” (digital video disc plus recordable, double layer), “DVD-R” (digital video disc minus recordable), “DVD VIDEO” (digital video disc, video), and “CD” (compact disc) logos are trademarks.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

## About this manual

“DVD” (digital video disc) may be used as a general term for commercial DVDs (digital video disc), DVD+RWs (digital video disc plus rewritable)/DVD+Rs (digital video disc plus recordable)/DVD+R DLs (+VR mode) (digital video disc plus recordable, double layer (plus video recording mode)) and DVD-RWs (digital video disc minus rewritable)/DVD-Rs (digital video disc minus recordable)/DVD-R DLs (digital video disc recordable, dual layer) (VR mode (video recording mode), video mode).


# Playback

## Control Menu display

Use the Control Menu to select a function and to view related information.

### Press DISPLAY (display).

To change the Control Menu display, press DISPLAY (display) again.

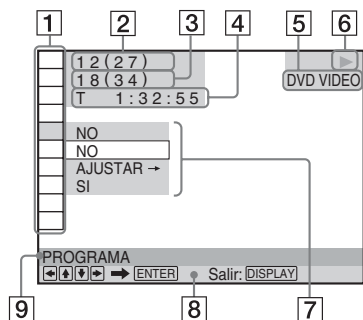

- 1** Control Menu items
- 2** Currently playing title/Total number of titles
- 3** Currently playing chapter/Total number of chapters
- 4** Playing time
- 5** Selected disc type
- 6** Playback status
- 7** Selected item icon/menu options
- 8** Operation message
- 9** Selected Control Menu item

## Menu list

Item	Item Name, Function
	<b>TITLE/SCENE/TRACK</b>
	<b>CHAPTER/INDEX</b>
	<b>TRACK</b>

Selects the title, scene, track, chapter, or index to be played.

## TIME/TEXT

Checks the elapsed time and the remaining playback time.

Input the time code for picture and music search (DVD (digital video disc) only).

## TOP MENU/MENU

(DVD VIDEO (digital video disc, video) only)

**TOP MENU:** Displays the top menu.

**MENU:** Displays the menu.

## ORIGINAL/PLAY LIST

Selects the type of title (DVD-VR (digital video disc, video recording) mode) to be played:

**ORIGINAL,** or edited **PLAY LIST.**

## PROGRAM\*1, \*2

Selects the title, chapter, or track to play in the order you want.

**1** Select "SET →," then press ENTER (enter) and select the title (T), chapter (C), or track (T) you want to program, and press ENTER (enter).

**2** Repeat selecting the title, chapter, or track.

**3** Press .

## SHUFFLE\*1, \*2

Plays the title, chapter, or track in random order.

## REPEAT\*1, \*2

Plays all titles/tracks/albums or a single title/chapter/track/album/file repeatedly.

## A-B REPEAT\*1, \*2

Specifies the parts you want to play repeatedly.

**1** During playback, select "SET →," then press ENTER (enter).  
The "A-B REPEAT" setting bar appears.

**2** When you find the starting point (point A), press ENTER (enter).

**3** When you reach the ending point (point B), press ENTER (enter) again.



## PARENTAL CONTROL

Set to prohibit playback on this player.

**PLAYER** →: Playback of some DVD VIDEOS (digital video disc, video) can be limited according to a predetermined level such as the age of the users. Scenes may be blocked or replaced with different scenes (Parental Control).

**PASSWORD** →: Enter a 4-digit password using the number buttons. Also use this menu to change the password.

### Parental Control (limited playback)

You can set a playback limitation level.

- 1 Select "PLAYER →," then press ENTER (enter).  
Enter or re-enter your 4-digit password, then press ENTER (enter).
- 2 Press ↑/↓ to select "STANDARD," then press ENTER (enter).  
Press ↑/↓ to select an area, then press ENTER (enter).  
When you select "OTHERS →," select and enter a standard code. See "Lista de códigos del Bloqueo de seguridad" at the end of this manual.
- 3 Press ↑/↓ to select "LEVEL," then press ENTER (enter).  
Press ↑/↓ to select the level, then press ENTER (enter).  
Parental Control setting is complete.  
The lower the value, the stricter the limitation.  
To turn off the Parental Control function, set "LEVEL" to "OFF."

If you forget your password, enter "199703" in the password box, press ENTER (enter), and then enter a new 4-digit password.



## SETUP

**QUICK:** Use Quick Setup to choose the desired language of the on-screen display, the aspect ratio of the TV and the audio output signal.

**CUSTOM:** In addition to the Quick Setup settings, you can adjust various other settings (page 6).

**RESET:** Returns the settings in "SETUP" to the default setting.



## ZOOM\*1

Magnifies the image up to four times the original size, scroll using ←/↑/↓/→.



## ANGLE

Changes the angle.



## CUSTOM PICTURE MODE

Selects the picture quality that best suits the program you are watching.

**STANDARD:** Displays a standard picture.

**DYNAMIC:** Produces a bold dynamic picture by increasing the picture contrast and the color intensity.

**CINEMA:** Enhances details in dark areas by increasing the black level.

**MEMORY** →: Adjusts the picture in greater detail.



## SHARPNESS

Exaggerates the outline of the image to produce a sharper picture.

**OFF:** Cancels this option.

- 1: Enhances the outline.
- 2: Enhances the outline more than 1.



## TVS (TV Virtual Surround)

Selects surround sound effect when connecting a stereo TV or 2 front speakers. This only works when playing a multichannel Dolby audio sound track. Furthermore, if the player is set up to output the signal from the DIGITAL OUT (COAXIAL) (digital out, coaxial) jack, the surround effect will only be heard when "DOLBY DIGITAL" is set to "D-PCM" in "AUDIO SETUP" (page 7).

**OFF:** Cancels the setting.

**TVS DYNAMIC THEATER/**

**TVS DYNAMIC/**

**TVS WIDE:** These modes are effective when the distance between the front L and R speakers is short, such as with built-in speakers on a stereo TV.

**TVS NIGHT:** This feature is useful when you want to hear the dialog and enjoy the surround sound effects of "TVS WIDE" at low volume.

**TVS STANDARD:** Use this setting when you want to use TVS with 2 separate speakers.

\*1 To return to normal play, select "OFF" or press CLEAR (clear).

\*2 The play mode is canceled when:  
– you open the disc tray.  
– you turn off the player.

### ◆Items for DATA (data) discs

Item	Item Name, Function
------	---------------------



#### ALBUM

Selects the album that contains music and photo files to be played.



#### FILE

Selects the photo file to be played.

---

## ALBUM

Selects the album that contains the video file to be played.

---

## FILE

Selects the video file to be played.

---

## DATE

Displays the date the picture was taken by a digital camera.

---

## INTERVAL\*

Specifies the duration for which the slides are displayed on the screen.

---

## EFFECT\*

Selects the effects to be used for changing slides during a slide show.

**MODE 1:** The images randomly cycle through the effects.

**MODE 2:** The image sweeps in from top left to bottom right.

**MODE 3:** The image sweeps in from top to bottom.

**MODE 4:** The image sweeps in from left to right.

**MODE 5:** The image stretches out from the center of the screen.

**OFF:** Turns off this function.

---

## MEDIA

Selects the media type you want to play.

**VIDEO:** Plays video files.

**PHOTO (MUSIC):** Plays photo and music files as a slide show. You can view a slide show with sound when music and photo files are placed in the same album. If the playing time of either music or photos is longer, the longer one continues without sound or image.

**PHOTO:** Plays photo files.

**MUSIC:** Plays music files. Press **SUBTITLE** (subtitle) while playing music files that contain unsynchronized lyric information. The player supports MP3 ID3 Lyrics only.

---

\* Depending on the file, this function may not be possible.

---

## To play VIDEO CDs (video compact disc) with PBC (Playback control) functions

When you start playing a VIDEO CD (video compact disc) with PBC (Playback control) functions, the menu for your selection appears.

### To play without using PBC (Playback control)

Press **◀◀/▶▶** or the number buttons while the player is stopped to select a track, then press **▶** or **ENTER** (enter). To return to PBC (Playback control) playback, press **■** twice, then press **▶**.

---

## To lock the disc tray (Child Lock)

You can lock the disc tray to prevent it being opened by mistake.

When the player is in standby mode, press in order, **↶** RETURN (return), **ENTER** (enter), and **I/⏻** on the remote.

The player turns on and “**L O C K**” (LOCKED (locked)) appears on the front panel display. The **▲** button does not work while the Child Lock is set.

### To unlock the disc tray

When the player is in standby mode, press in order, **↶** RETURN (return), **ENTER** (enter), and **I/⏻** on the remote again.

## Controlling TVs with the remote

You can control the sound level, input source, and power switch of your Sony TV with the supplied remote.

If your TV is listed in the table below, set the appropriate manufacturer's code.

When you replace the batteries of the remote, set the appropriate code number again.

1 While holding down TV I/O, press the number buttons to select your TV's manufacturer's code.


2 Release TV I/O.

### Code numbers of controllable TVs

Sony	01 (default)
Hitachi	02
LG/Goldstar/NEC	04
MGA/Mitsubishi	13
Panasonic	19
Philips	21
Pioneer	16
RCA	10
Samsung	20
Sharp	18
Toshiba	07

## CUSTOM Menu

You can adjust various settings.

Press DISPLAY (display) when the player is in stop mode, select  (SETUP), and then select "CUSTOM." The CUSTOM menu appears.

### Menu list

Item	Item Name, Function
------	---------------------

	LANGUAGE SETUP
---	----------------

**OSD (On-Screen Display):** Switches the display language on the screen.

**MENU\*<sup>1</sup>:** Selects the desired language for the disc's menu. (DVD VIDEO (digital video disc, video) only)

**AUDIO\*<sup>1</sup>:** Switches the language of the sound track. When you select "ORIGINAL," the language given priority in the disc is selected. (DVD VIDEO (digital video disc, video) only)

**SUBTITLE\*<sup>1</sup>:** Switches the language of the subtitle recorded on the DVD VIDEO (digital video disc, video). When you select "AUDIO FOLLOW," the language for the subtitles changes according to the language you selected for the sound track. (DVD VIDEO (digital video disc, video) only)



### SCREEN SETUP

**TV TYPE:** Selects the aspect ratio of the connected TV.

16:9




4:3 LETTER BOX



4:3 PAN SCAN



**SCREEN SAVER:** When set to "ON," the screen saver appears when the player is in pause or stop mode for 15 minutes. Press  to turn off the screen saver.

**BACKGROUND:** Selects the background color or picture on the TV screen. If you set "JACKET PICTURE," even though the disc does not contain a jacket picture, the "GRAPHICS" picture appears.

**BLACK LEVEL:** Selects the black level (setup level) for video signals output from the jacks other than COMPONENT VIDEO OUT (component video out).

**BLACK LEVEL (COMPONENT OUT):** Selects the black level (setup level) for video signals output from the COMPONENT VIDEO OUT (component video out) jacks.

**PROGRESSIVE (COMPONENT OUT ONLY)\*<sup>2</sup>:** Set to "ON" if your TV accepts progressive format signals. When you select "ON," set also the following "MODE (PROGRESSIVE)" and "4:3 OUTPUT."

**MODE (PROGRESSIVE):** If you select "AUTO," the player detects the format (film-based or video-based), and converts to the appropriate version.

**4:3 OUTPUT:** This setting is effective only when you set "TV TYPE" to "16:9." Select "FULL" when you can change the aspect ratio on your TV.



## CUSTOM SETUP

**AUTO STANDBY:** Sets the Auto Standby setting on or off. If you select "ON," the player enters standby mode when left in stop mode for more than 30 minutes.

**AUTO PLAY:** When set to "ON," the player automatically starts playback when the player is turned on by a timer (not supplied).

**PAUSE MODE:** Selects the picture in pause mode. Normally select "AUTO." When the picture is output in high resolution, set to "FRAME." (DVD (digital video disc) only)

**TRACK SELECTION:** Gives the sound track which contains the highest number of channels priority when you play a DVD VIDEO (digital video disc, video) on which multiple audio formats (PCM (pulse code modulation), DTS (digital theater system), or Dolby Digital format) are recorded. If you select "AUTO," priority is given. (DVD VIDEO (digital video disc, video) only)

**MULTI-DISC RESUME:** Switches the Multi-disc Resume setting on or off. Resume playback can be stored in memory for up to 6 different DVD VIDEOS (digital video disc, video)/ VIDEO CDs (video compact disc). If you start the settings again, the resume point is cleared. (DVD VIDEO (digital video disc, video)/ VIDEO CD (video compact disc) only)



## AUDIO SETUP

**AUDIO DRC (Dynamic Range Control)\*<sup>3</sup>:** Set according to the surrounding environment. Set to "TV MODE" when the smallest sounds are indiscernible, or set to "WIDE RANGE" when the listening environment is good, for example, in a home movie theater.

**DOWNMIX\*<sup>3</sup>:** Switches the method for mixing down to 2 channels when you play a DVD (digital video disc) which has rear sound elements (channels), or is recorded in Dolby Digital format. Normally select "DOLBY SURROUND."

**DIGITAL OUT:** Selects if audio signals are output via the DIGITAL OUT (COAXIAL) (digital out, coaxial) jack. When you select "ON," set also the following "DOLBY DIGITAL," "DTS," or "48kHz/96kHz PCM."

**DOLBY DIGITAL:** Selects the type of Dolby Digital signal. Set to "D-PCM" when the player is connected to an audio component without a built-in Dolby Digital decoder.

**DTS:** Selects the type of DTS (digital theater system) audio signal. Set to "ON" when you play a DVD VIDEO (digital video disc, video) with DTS (digital theater system) sound tracks. Do not set to "ON" when you connect the player to an audio component without a DTS (digital theater system) decoder.

**48kHz/96kHz PCM:** Selects the sampling frequency of the digital audio output signal. (DVD VIDEO (digital video disc, video) only)

\*<sup>1</sup> When you select "OTHERS →," select and enter a language code. See "Lista de códigos de idiomas" at the end of this manual.

\*<sup>2</sup> If the picture does not appear normally or goes blank, reset the setting. Press to turn off, enter "369," and then press to turn on the player again.

\*<sup>3</sup> This function affects the output from the following jacks:  
– AUDIO OUT L/R (audio out left/right) jacks.  
– DIGITAL OUT (COAXIAL) (digital out, coaxial) jack only when "DOLBY DIGITAL" is set to "D-PCM."

---

# Information

---

## Troubleshooting

---

If you experience any of the following difficulties while using the player, use this troubleshooting guide to help remedy the problem before requesting repairs. Should any problem persist, consult your nearest Sony dealer.

---

### The power is not turned on.

- Check that the power cord is connected securely.

---

### There is no picture/picture noise appears.

- Re-connect the connecting cord securely.
- The connecting cords are damaged.
- Check the connection to your TV and switch the input selector on your TV so that the signal from the player appears on the TV screen.
- The disc is dirty or flawed.
- Press **⏻** to turn off the player, and enter "369" using the number buttons on the remote, then press **⏻** to turn on the player again.


---

### There is no sound.

- Re-connect the connecting cord securely.
- The connecting cord is damaged.
- The player is in pause mode or in Slow-motion Play mode.
- The player is in fast forward or fast reverse mode.

---

### The remote does not function.

- The batteries in the remote are weak.
- The remote is not pointed at the remote sensor  on the player.
- When you operate the player by pressing buttons on the remote in sequence, press the buttons within 5 seconds of each other.

---

### The disc does not play.

- The disc is turned over.  
Insert the disc with the playback side facing down.
- The disc is skewed.
- The player cannot play certain discs.
- The region code on the DVD (digital video disc) does not match the player.
- Moisture has condensed inside the player.
- The player cannot play a recorded disc that is not correctly finalized.

---

### The player does not operate properly.

- When static electricity, etc., causes the player to operate abnormally, unplug the player.

---

### The disc tray does not open and "LOCK" (LOCKED (locked)) appears on the front panel display.

- Child Lock is set (page 5).

---

### The disc tray does not open and "E-LOCK" (TRAY LOCKED (tray locked)) appears on the front panel display.

- Contact your Sony dealer or local authorized Sony service facility.

---

### "C13" appears on the front panel display.

- Clean the disc with a cleaning cloth or check its format.

---

### "C31" appears on the front panel display.

- Re-insert the disc correctly.



---

## Playable file format

Video: MPEG-1 (Cyber-shot data)

Photo: JPEG (DCF (Design rule for Camera File system) format)

Music: MP3 (except for mp3PRO)/

WMA(except for WMA Pro)\*<sup>1</sup>. \*<sup>2</sup>/

AAC\*<sup>1</sup>. \*<sup>2</sup>/LPCM/WAVE

\*<sup>1</sup> Files with copyright protection (Digital Right Management) cannot be played.

\*<sup>2</sup> The player does not play coded files such as Lossless.

Supported extensions: “.mpg”, “.mpeg”, “.jpg”, “.mp3”, “.wma”, “.m4a”, “.wav”

Supported discs: DVD (digital video disc), DVD±RW (digital video disc plus/minus rewritable)/±R (plus/minus recordable)/±R DL (plus/minus recordable double/dual layer), Music CD (compact disc)/Super VCD (video compact disc), CD-R (compact disc-recordable) /-RW (rewritable)

- DATA CDs (data compact disc) recorded according to ISO (International Organization for standardization) 9660 Level 1/Level 2, or its extended format, Joliet.
- DATA DVDs (data digital video disc) recorded according to UDF (universal disk format).
- The player will play any file in the above, even if the file format differs. Playing such data may generate noise that can result in speaker damage.
- To play a complex hierarchy of folders may take some time. Create albums with no more than two hierarchies.
- Some video, photo, and music files may not play, depending on the encoding/recording condition.
- To start playback and proceed to the next or another album/file may take some time.
- The player will recognize a maximum of 200 albums and 600 files. It can recognize up to 300 music files and 300 photo files when “PHOTO (MUSIC)” is selected.
- The player may not play a combination of two or more video files.
- The player cannot play a video file of size more than 720 (width) × 576 (height)/2 GB (giga byte).
- Depending on the file, playback may not be smooth. You are recommended to create the file at a lower bit rate.

- The player may not play back the high bit rate video file on the DATA CD (data compact disc) smoothly. You are recommended to play back using DATA DVD (data digital video disc).

### Note about recordable media

Some recordable media cannot be played on this player due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software. The disc will not play if it has not been correctly finalized. Also some DATA (data) discs created in Packet Write format cannot be played.

### For player that cannot play images that contain a copy protection only

Images in DVD-VR (digital video disc, video recording) mode with CPRM (Content Protection for Recordable Media) protection may not be played.

### Note on playback operations of DVDs (digital video disc) and VIDEO CDs (video compact disc)

Some playback operations of DVDs (digital video disc) and VIDEO CDs (video compact disc) may be intentionally set by software producers. Since this player plays DVDs (digital video disc) and VIDEO CDs (video compact disc) according to the disc contents the software producers designed, some playback features may not be available. Also, refer to the operating instructions supplied with the DVDs (digital video disc) or VIDEO CDs (video compact disc).

### Note on discs

This unit is designed to playback discs that conform to the Compact Disc (CD) standard. DualDiscs and some music discs encoded with copyright protection technologies do not conform to the Compact Disc (CD) standard. Therefore, these discs may not be compatible with this unit.

---

## Specifications

### System

Laser: Semiconductor laser

### Outputs

- AUDIO OUT (L/R) (audio out left/right): Phono jack
- DIGITAL OUT (COAXIAL) (digital out, coaxial): Phono jack
- COMPONENT VIDEO OUT (component video out) (Y, P<sub>B</sub>, P<sub>R</sub>): Phono jack
- VIDEO OUT (video out): Phono jack

### General

- Power requirements: 120 V AC, 60 Hz
- Power consumption: 6 W
- Dimensions (approx.): 320 × 38 × 209 mm (width/height/depth) incl. projecting parts
- Mass (approx.): 1.1 kg
- Operating temperature: 5 °C to 35 °C
- Operating humidity: 25 % to 80 %

### Supplied accessories

- Audio/Video cord (phono plug × 3 ↔ phono plug × 3) (1)
- Remote commander (remote) (1)
- Size AA (R6) batteries (2)

Specifications and design are subject to change without notice.

# Lista de códigos de idiomas

📄 página 6

Código de idioma	Código de idioma	Código de idioma	Código de idioma
1 027 Afar	1 183 Irlandés	1 347 Maorí	1 507 Samoano
1 028 Abjasiano	1 186 Gaélico	1 349 Macedonio	1 508 Shona
1 032 Afrikaans	1 194 Gallego	1 350 Malayalam	1 509 Somalí
1 039 Amharic	1 196 Guaraní	1 352 Mongoliano	1 511 Albano
1 044 Árabe	1 203 Gujaratí	1 353 Moldavo	1 512 Serbia
1 045 Assamese	1 209 Hausa	1 356 Marathi	1 513 Siswati
1 051 Aymara	1 217 Hindi	1 357 Malayo	1 514 Sesotho
1 052 Azerbayano	1 226 Croata	1 358 Maltés	1 515 Sundanés
1 053 Bashkir	1 229 Húngaro	1 363 Burmés	1 516 Sueco
1 057 Bielorruso	1 233 Armenio	1 365 Nauru	1 517 Sawahili
1 059 Búlgaro	1 235 Interlingua	1 369 Nepalí	1 521 Tamil
1 060 Bihari	1 239 Interlingüe	1 376 Holandés	1 525 Telugu
1 061 Bislama	1 245 Inupiak	1 379 Noruego	1 527 Tajiko
1 066 Bengalí; Bangla	1 248 Indonesio	1 393 Occitano	1 528 Tailandés
1 067 Tibetano	1 253 Islandés	1 403 (Afan) Oromo	1 529 Tigrinya
1 070 Bretón	1 254 Italiano	1 408 Oriya	1 531 Turkmeno
1 079 Catalán	1 257 Hebreo	1 417 Punjabí	1 532 Tagalo
1 093 Corso	1 261 Japonés	1 428 Polaco	1 534 Setswana
1 097 Checo	1 269 Yiddish	1 435 Pashto; Pusho	1 535 Tonga
1 103 Galés	1 283 Javanés	1 436 Portugués	1 538 Turco
1 105 Danés	1 287 Georgiano	1 463 Quechua	1 539 Tsonga
1 109 Alemán	1 297 Kazajo	1 481 Retorromance	1 540 Tártaro
1 130 Butaní	1 298 Groenlandés	1 482 Kirundi	1 543 Twi
1 142 Griego	1 299 Camboyano	1 483 Rumanano	1 557 Ucraniano
1 144 Inglés	1 300 Kannada	1 489 Ruso	1 564 Urdu
1 145 Esperanto	1 301 Coreano	1 491 Kinyarwanda	1 572 Uzbeke
1 149 Español	1 305 Kashmirí	1 495 Sánscrito	1 581 Vietnamita
1 150 Estonio	1 307 Kurdo	1 498 Sindhi	1 587 Volapük
1 151 Vasco	1 311 Kirguiso	1 501 Sangho	1 613 Wolof
1 157 Persa	1 313 Latín	1 502 Serbo- Croata	1 632 Xhosa
1 165 Finlandés	1 326 Lingala	1 503 Singhalés	1 665 Yoruba
1 166 Fiji	1 327 Laosiano	1 505 Eslovaco	1 684 Chino
1 171 Feroés	1 332 Lituano	1 506 Esloveno	1 697 Zulú
1 174 Francés	1 334 Letón; Lettish		
1 181 Frisio	1 345 Malagasio		1 703 Sin especificar

ISO (International Organization for standardization) 639: 1988 (E/F) standard

# Lista de códigos del Bloqueo de seguridad

📄 página 4

Código Área	Código Área	Código Área	Código Área
2 109 Alemania	2 304 Corea	2 254 Italia	2 184 Reino Unido
2 044 Argentina	2 115 Dinamarca	2 276 Japón	2 489 Rusia
2 047 Australia	2 149 España	2 363 Malasia	2 501 Singapur
2 046 Austria	2 424 Filipinas	2 362 México	2 499 Suecia
2 057 Bélgica	2 165 Finlandia	2 379 Noruega	2 086 Suiza
2 070 Brasil	2 174 Francia	2 390 Nueva Zelanda	2 528 Tailandia
2 079 Canadá	2 376 Holanda	2 427 Pakistán	
2 090 Chile	2 248 India	2 436 Portugal	
2 092 China	2 238 Indonesia		



\* | - 4 2 6 6 0 2 1 4 1 . \*

4-266-021-E1(1)

Printed in China

<http://www.sony.net/>